



# Installation Guide

## Bioclimatic Pergolas

## SUMMARY

Tools required	page 3
Hardware	page 4
General overview	page 5
Installation of supports	page 6
Installation of gutter	page 7
Connection of gutter	page 8
Connection of angle gutter	page 9
Installation of Original louver casing	page 10
Installation of REVO louver casing	page 11
Installation of finishing louver profile	page 12
Preparation of Original louvers	page 13
Preparation of REVO louvers	page 14
Installation of louvers	page 15
Installation of powered operating mechanism	page 17
Installation of manual operating mechanism	page 19
Installation of the opposite lateral gutter	page 21

# Tools required



Ø 2.9 mm , Ø 3.5 mm, Ø 4.2 mm, Ø 6.2 mm










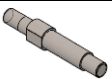
No. 10  
No. 13  
No. 17



Ø 30  
Ø 50



## Hardware

Designation	Description	Designation	Description
Self-tapping screws $\varnothing$ 4.2 mm		Adjustable threaded axle	
Plastic clip		Screw FHc M6 x 12	
Screw cover		Screw nut M10	
Countersunk-screw 2.9 x 13		Grower washer $\varnothing$ 10	
Single axle		Screws H M8 x 30	
Split pin		Star washer $\varnothing$ 6	
Standard threaded axle		Screws BHc M6x16	
Flanged threaded axle		Screws CHc M6x40	
Nut lock M8		Screws FHc M6x60	
Washer $\varnothing$ 8		Strut	
Screws FHc M6x20		Screws CHc M6x20	
Axle ML		Grower washer $\varnothing$ 6	
Elastic washer $\varnothing$ 6		Plastic washer $\varnothing$ 6	
Nut lock M6			

# General overview

Original STD



Original XL-B



REVO



REVO casing



Original casing

 


Left support

Left gutter



Left gutter

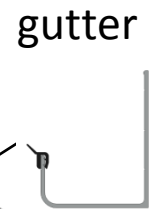

Left



 
Right



Front



Right gutter

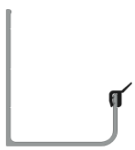

Right support




Gutter




Finishing louver profile




# Installation of supports

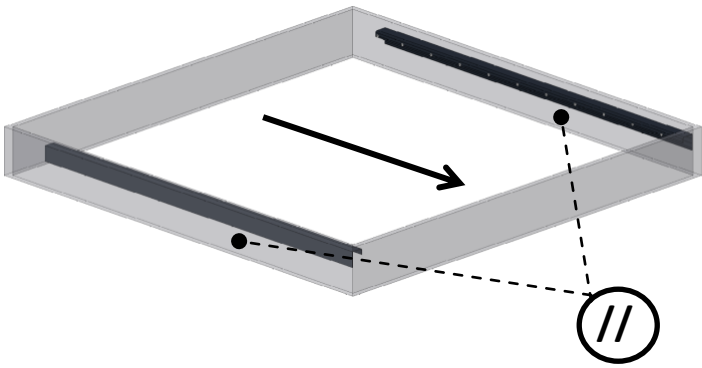 


①

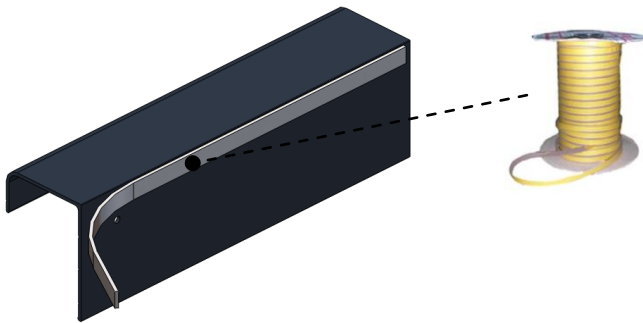 


②

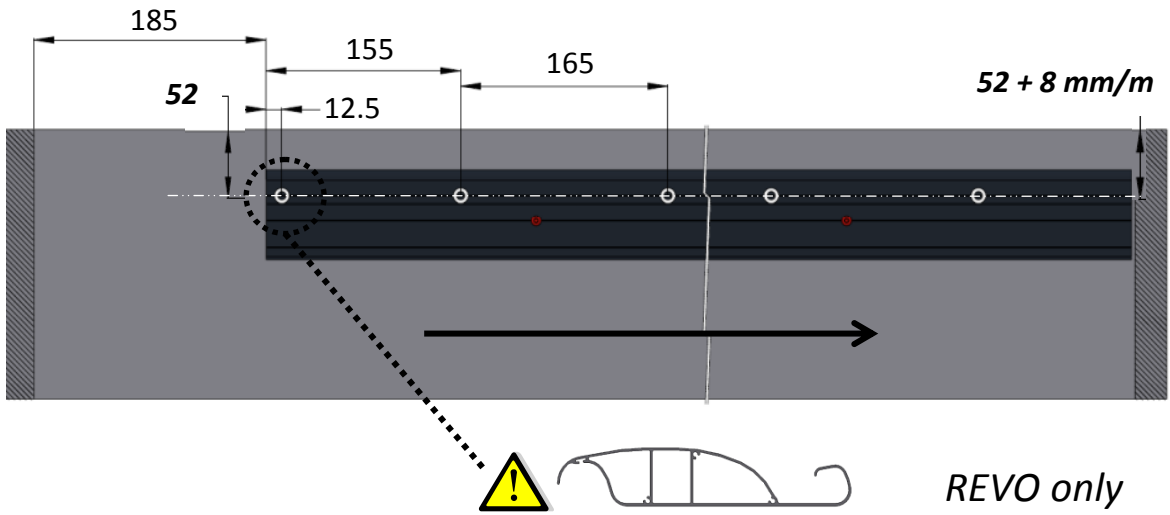 


③

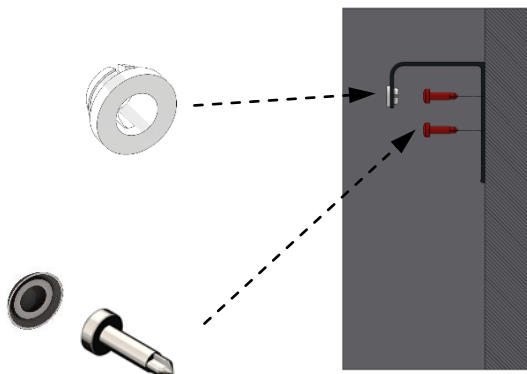 


# Installation of gutter

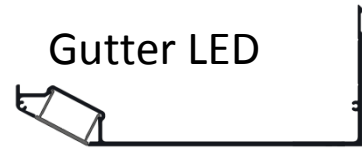 



1

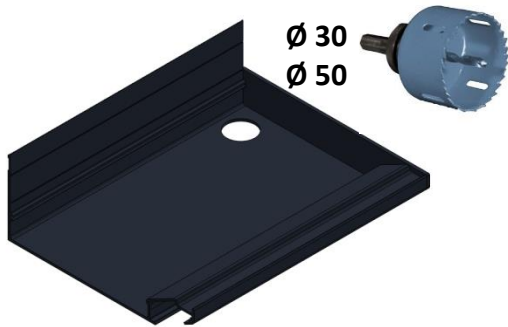 


2

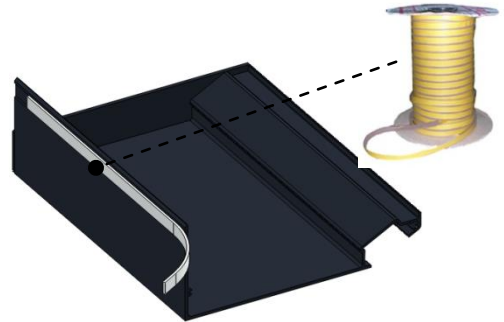 

3

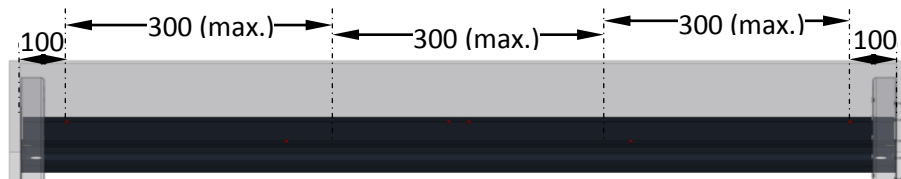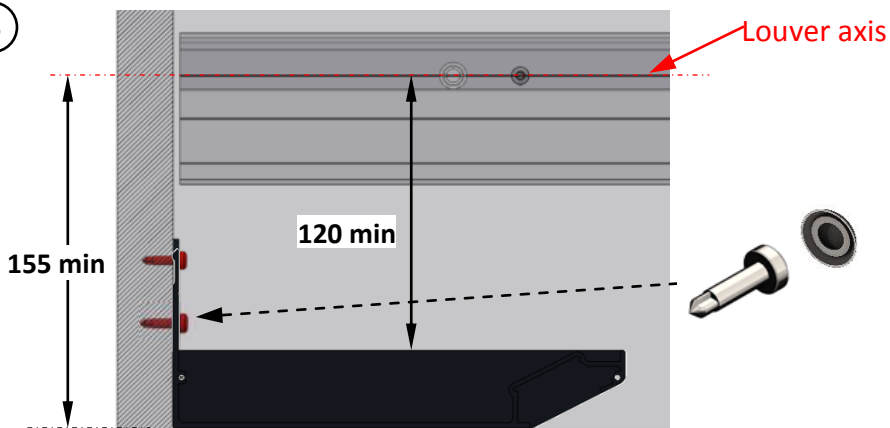  


4

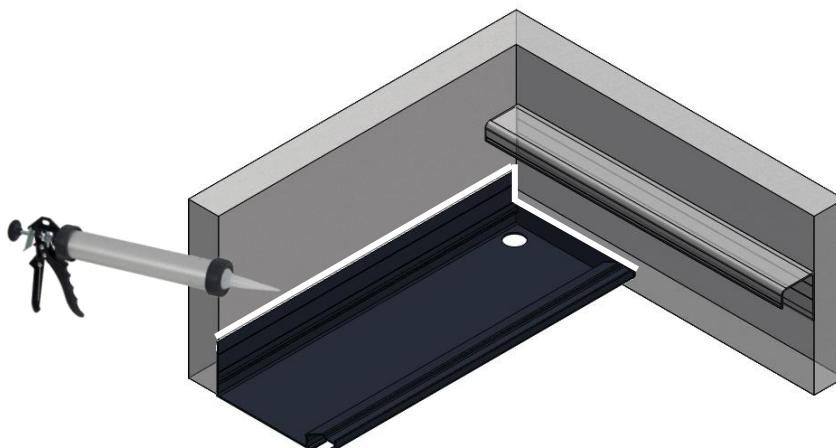 


# Connection of gutter

 
1

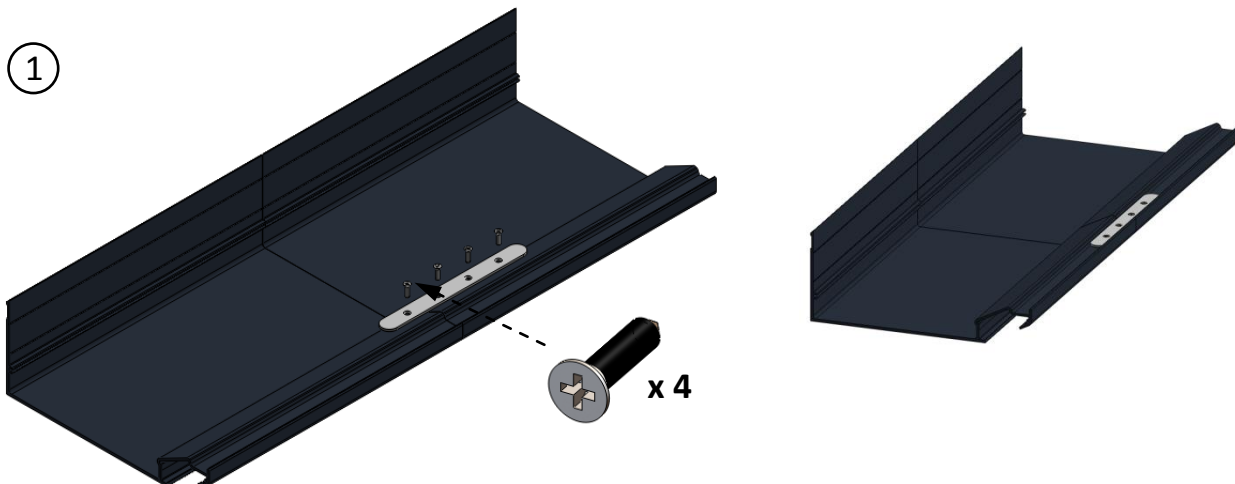

2

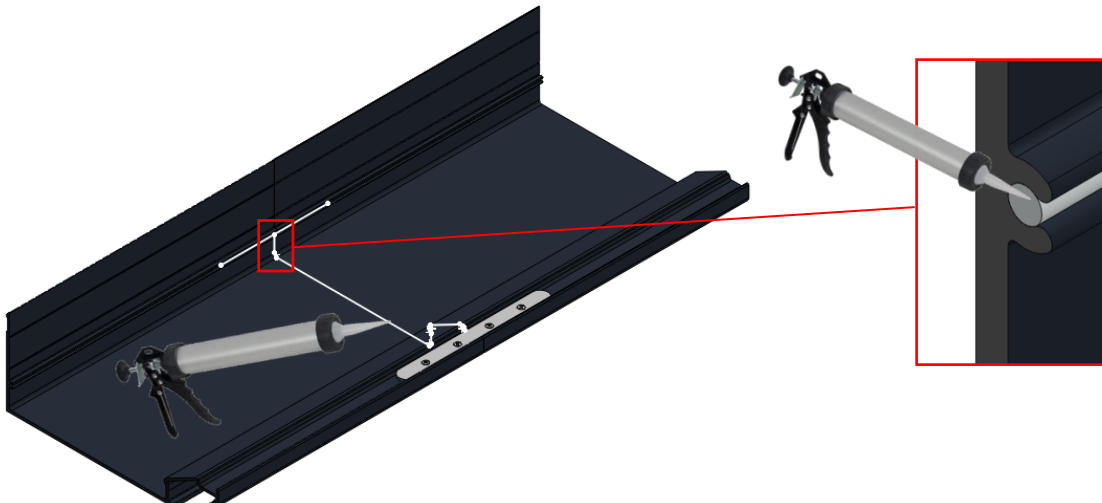 


3

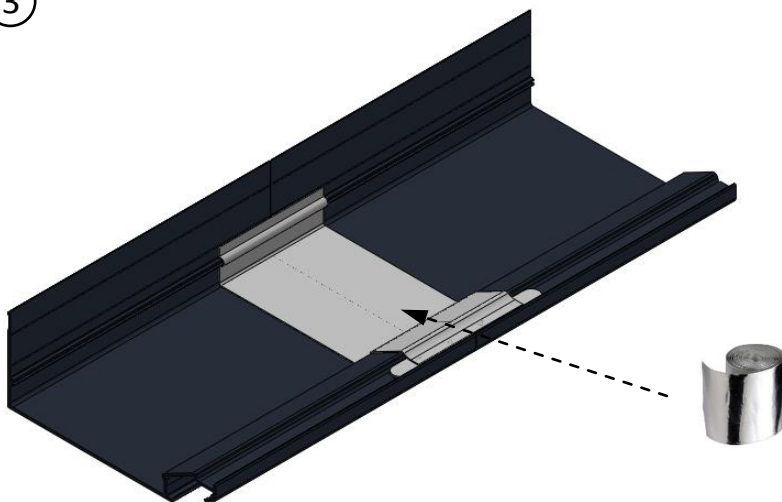 



# Connection of angle gutter

 
①

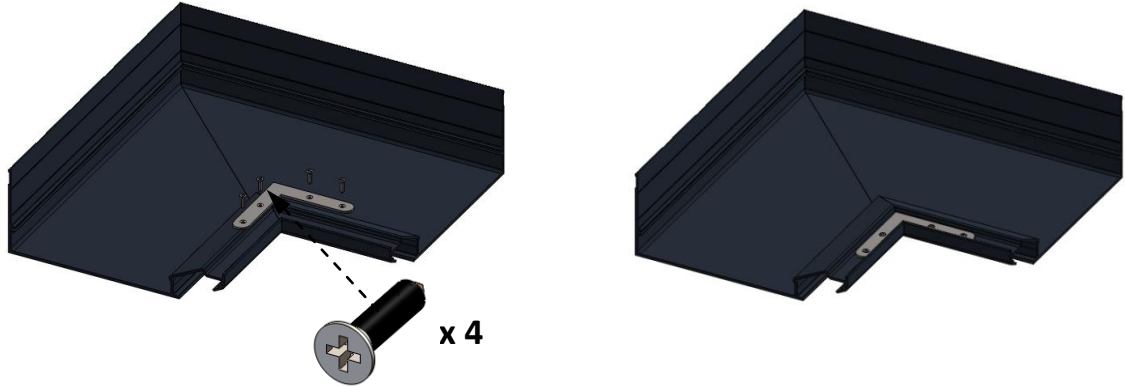

②






 
③

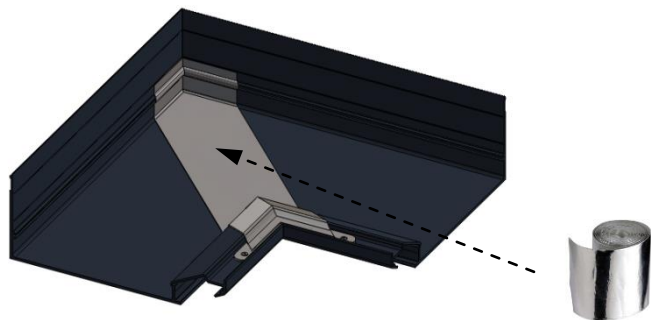

# Installation of Original louver casing





 
 
 
 
Original louver casing

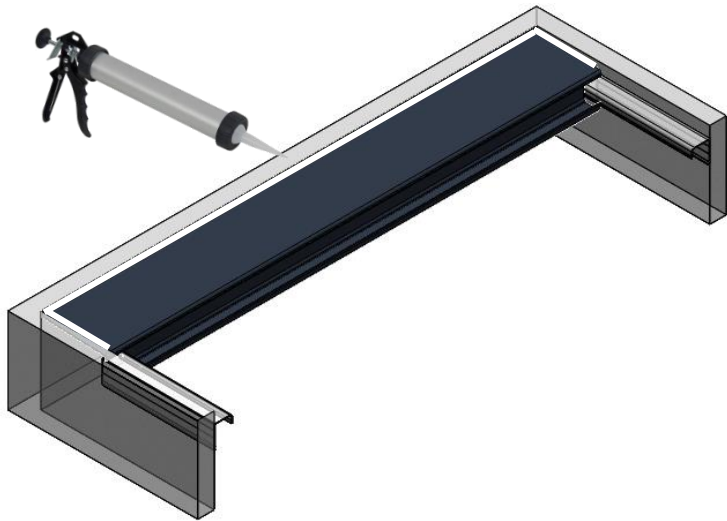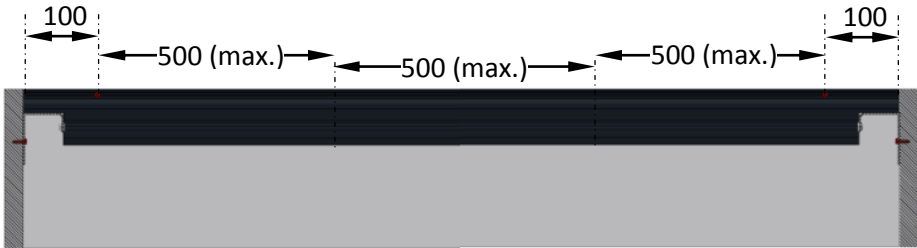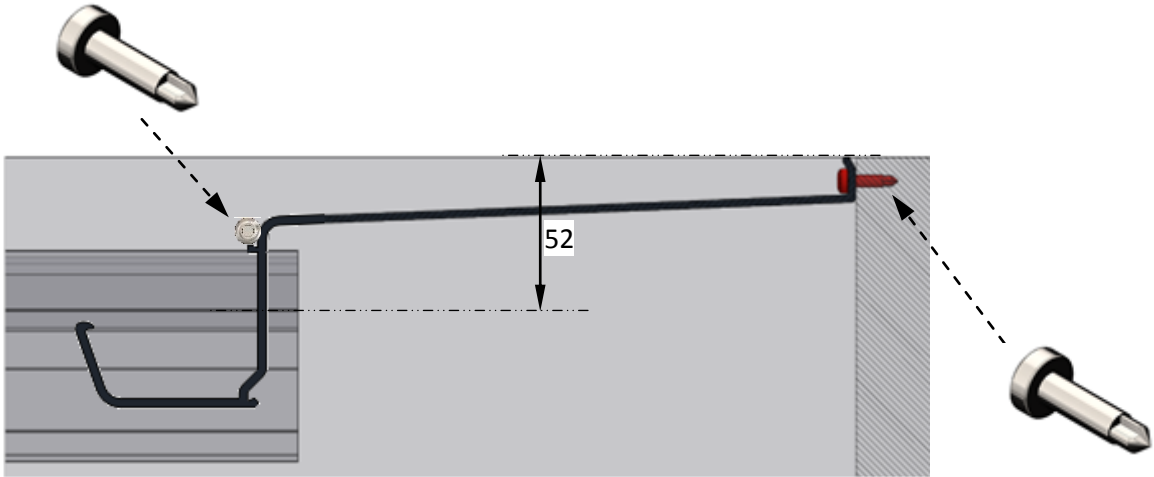

# Installation of REVO louver casing



      REVO louver casing

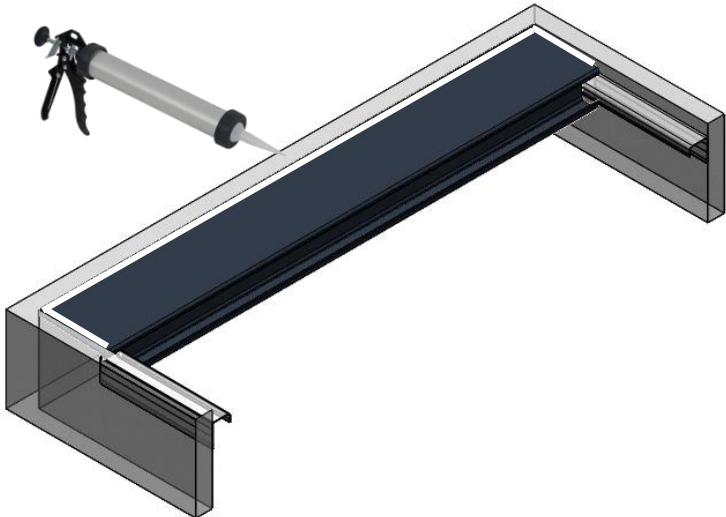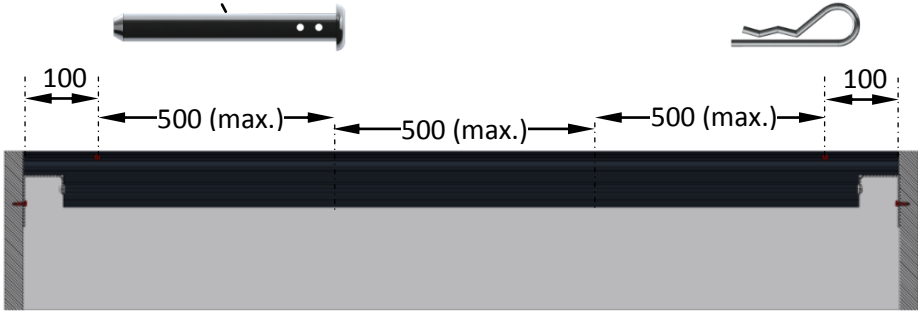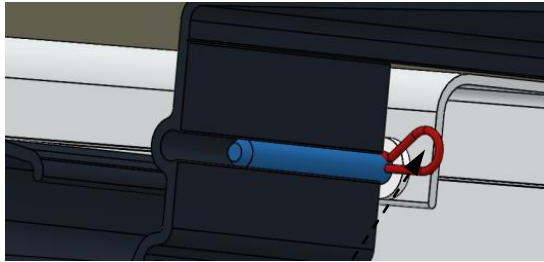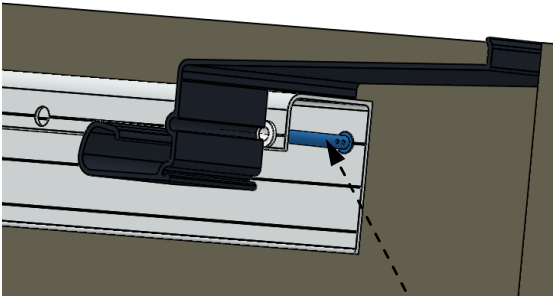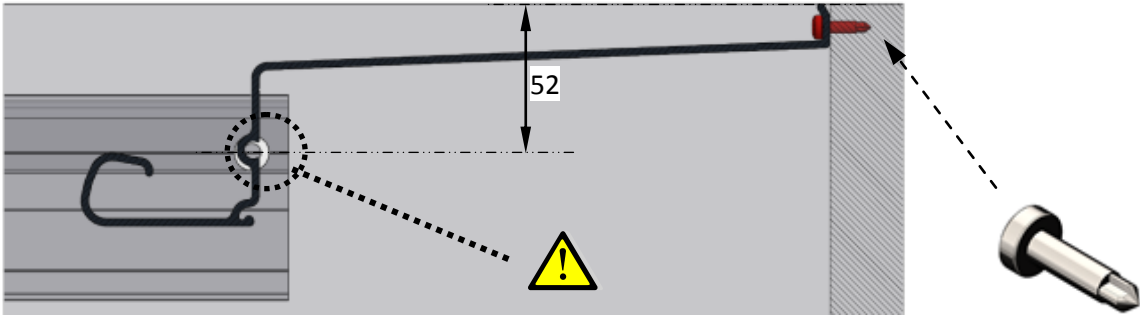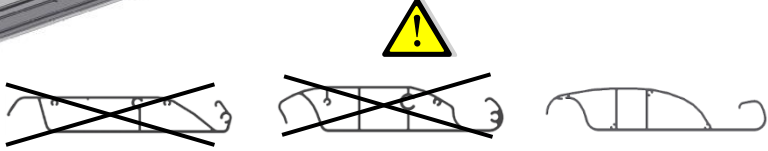



# Installation of finishing louver profile







Finishing louver profile





 
 
Case 1

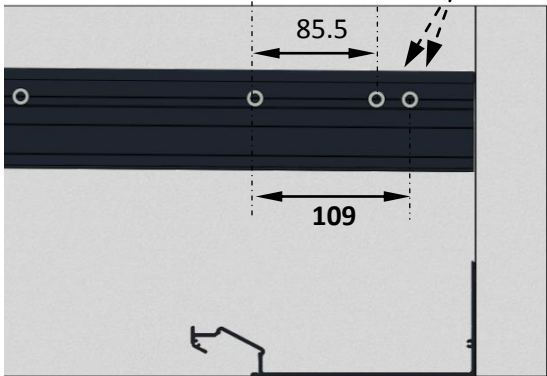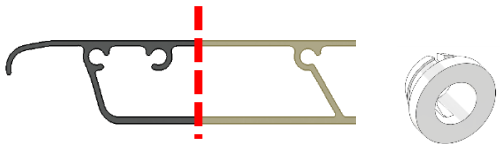





Case 2

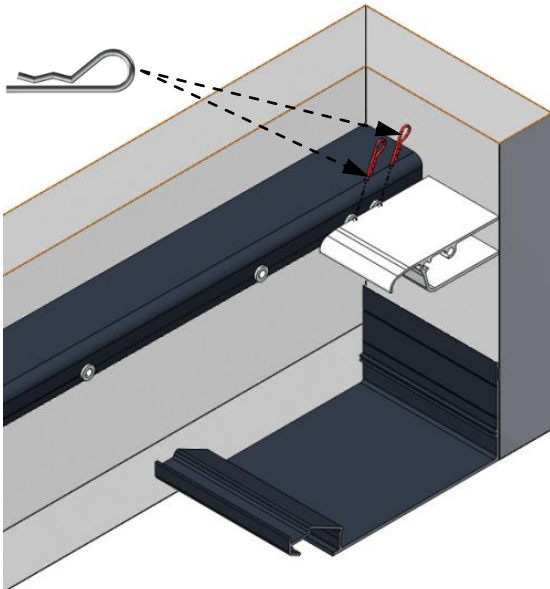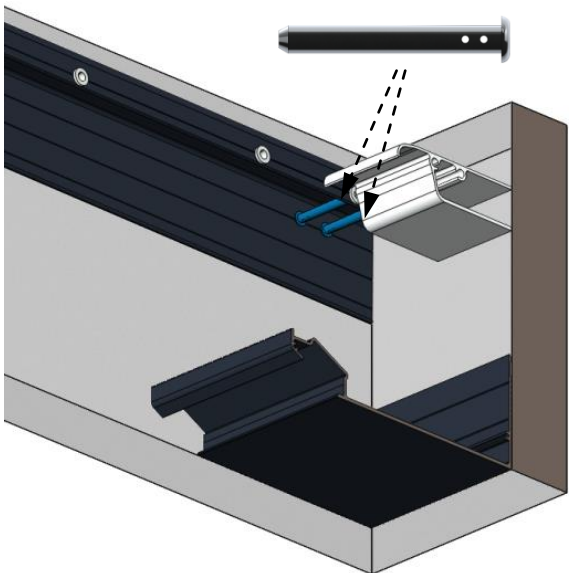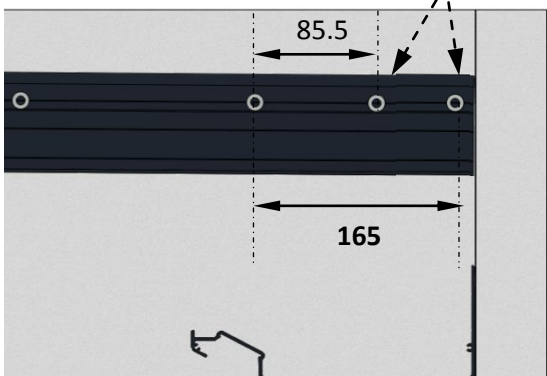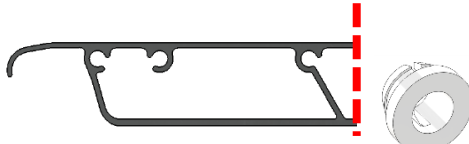    





# Preparation of Original louvers

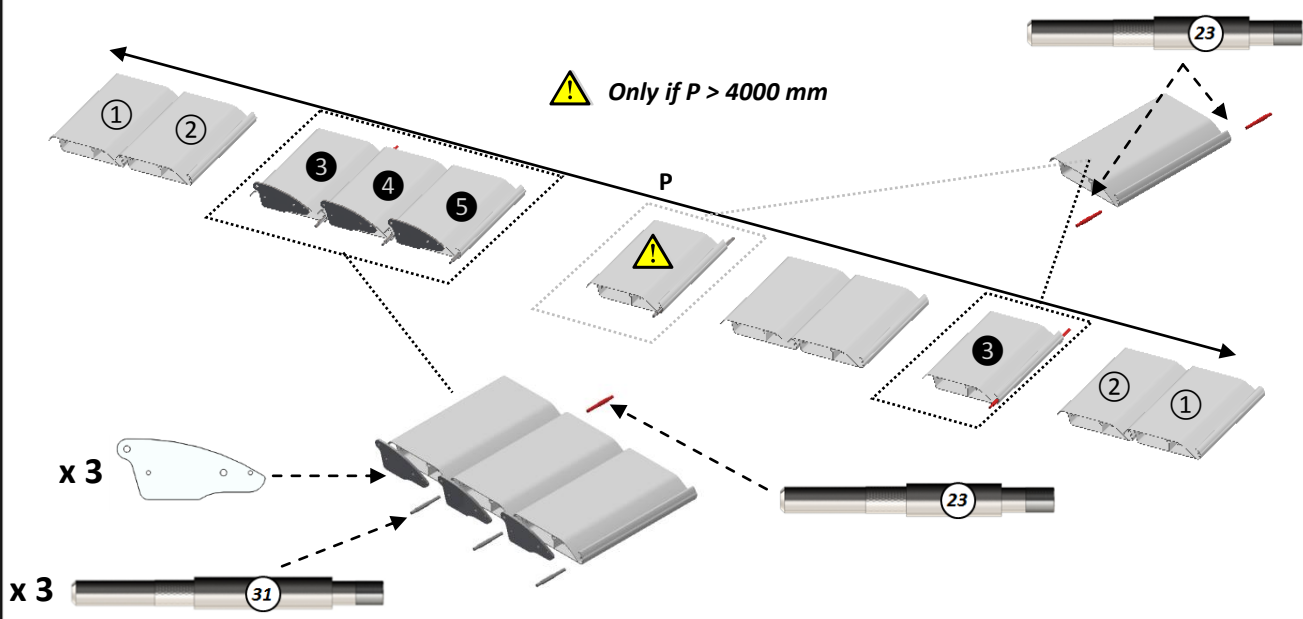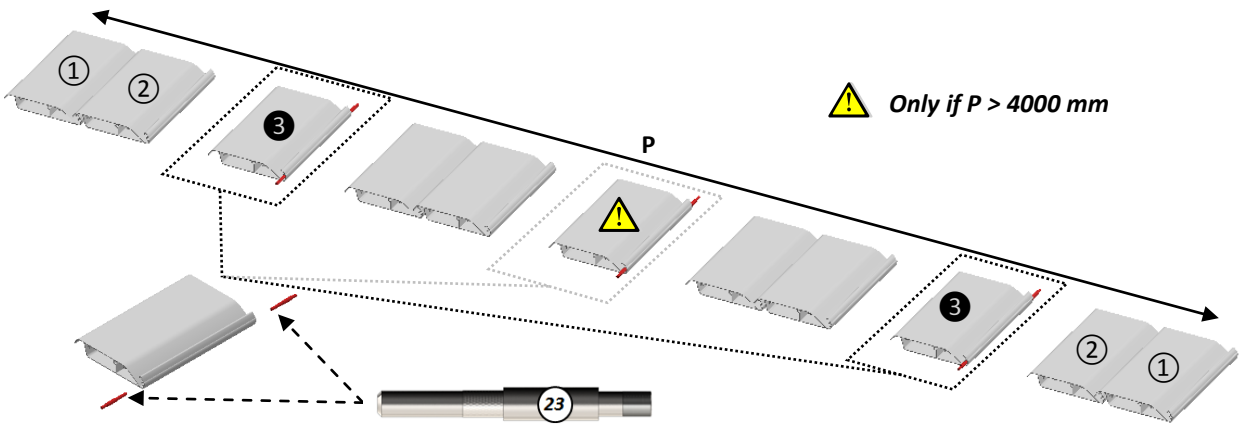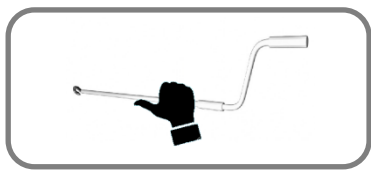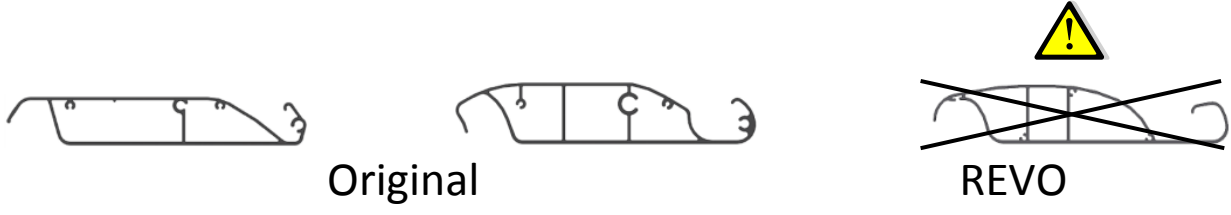    


# Preparation of REVO louvers

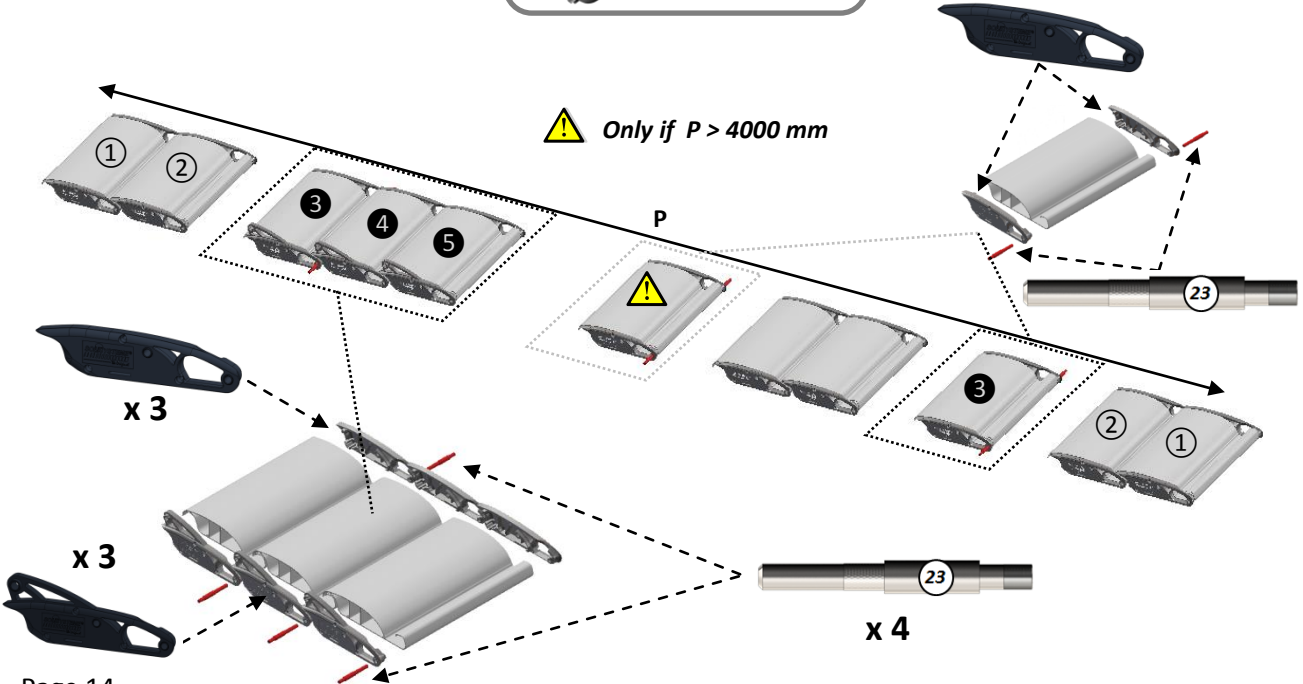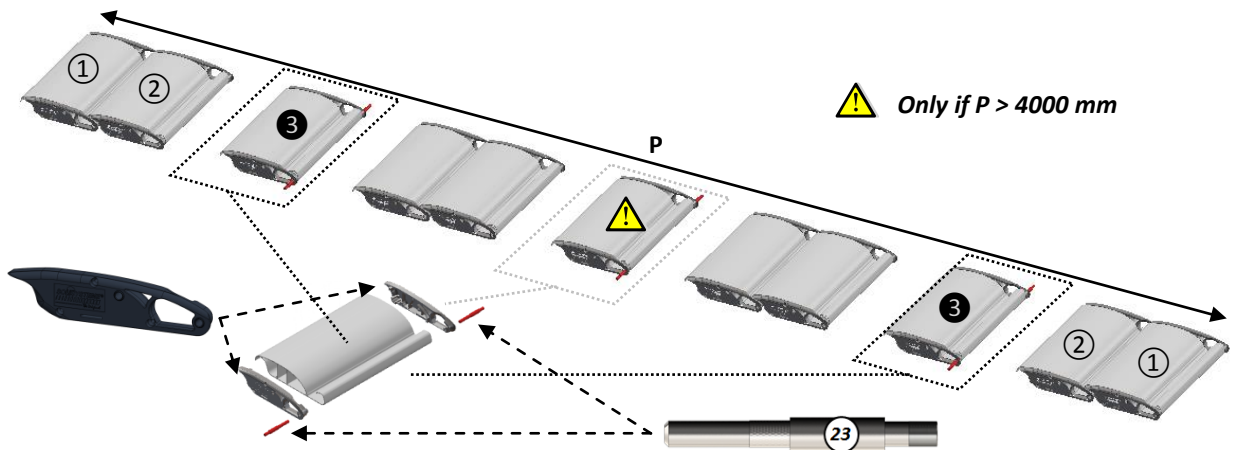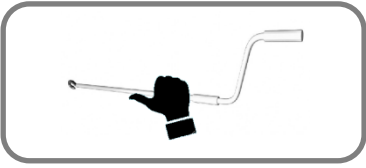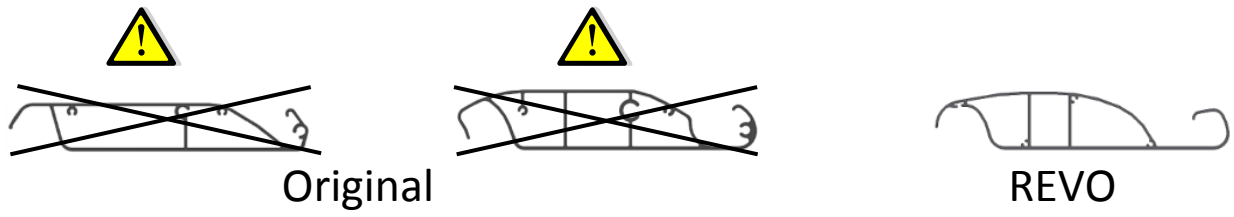    


# Installation of louvers

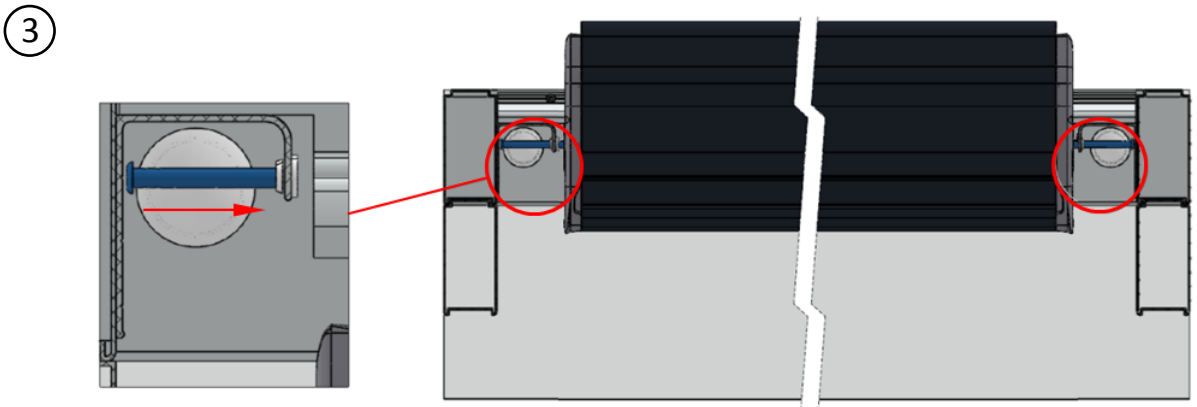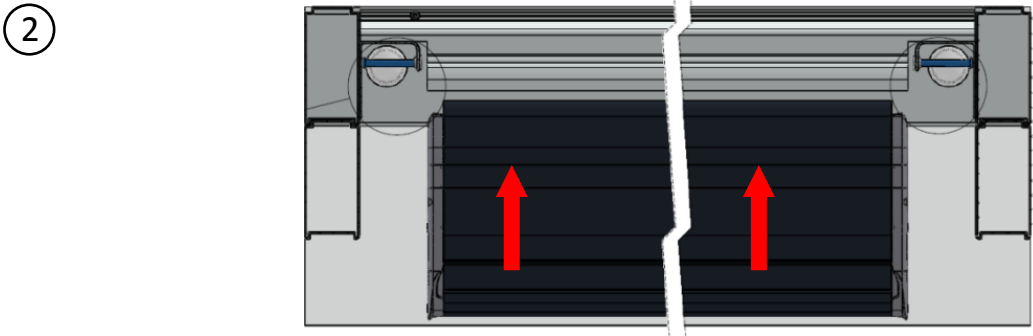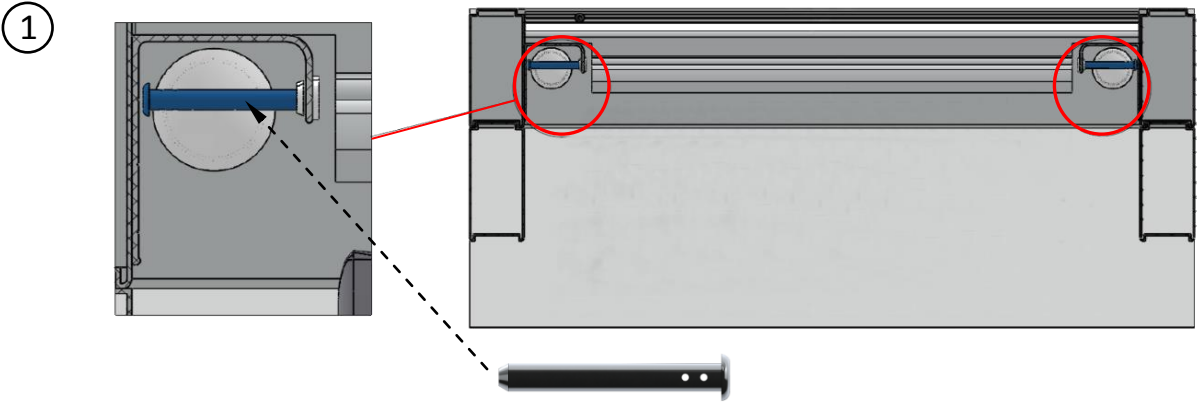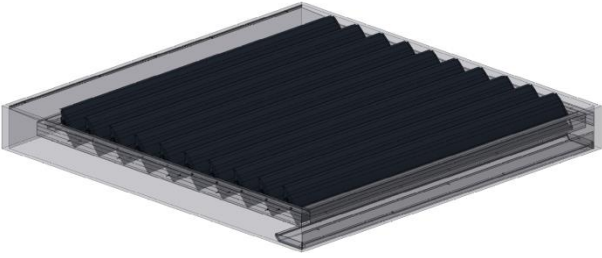    


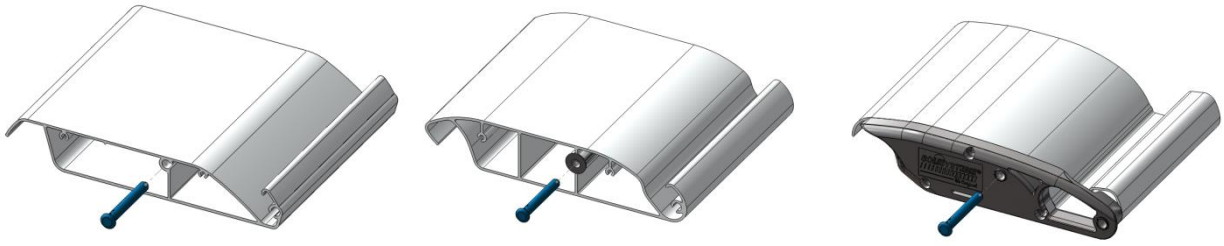 

4

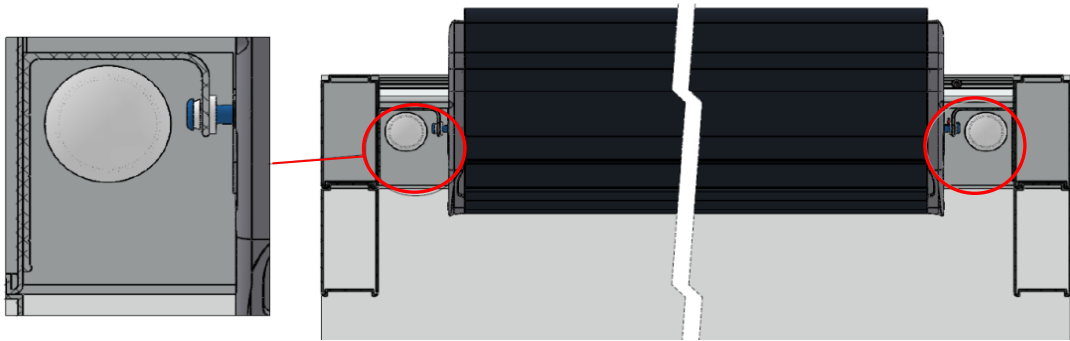 


5

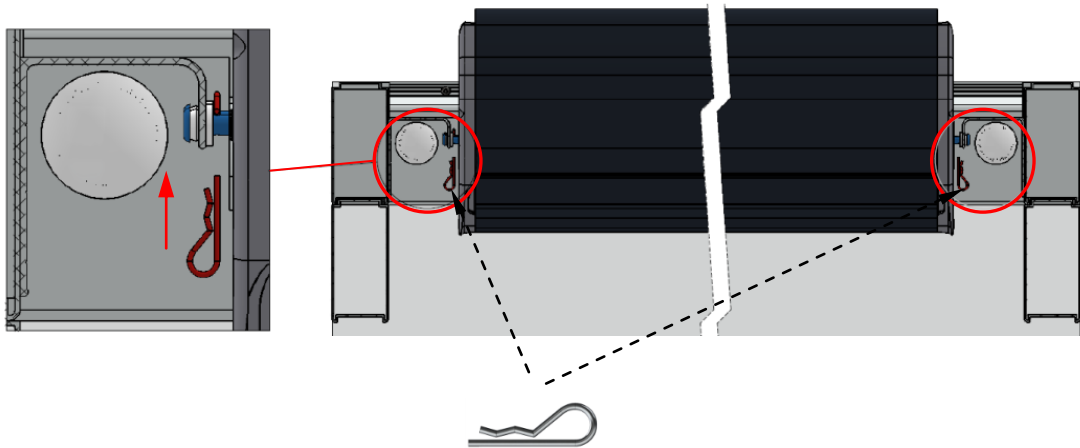 






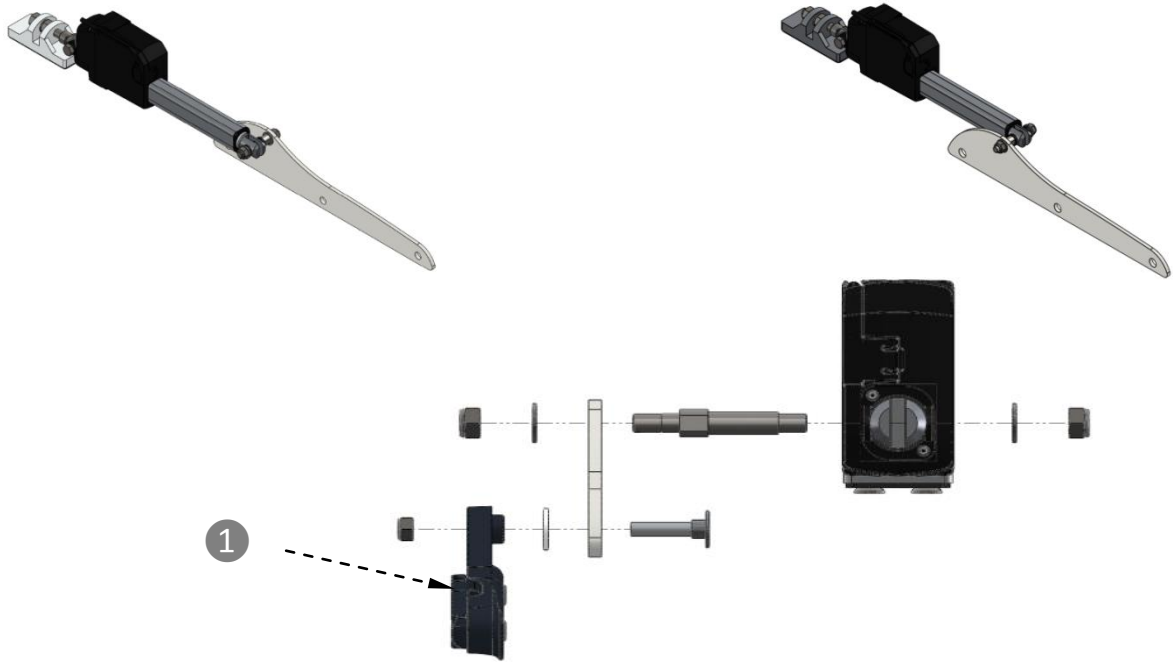 





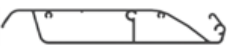


# Installation of powered operating mechanism

 
 


For the motor plugins, connect the **blue (-)** and **brown (+)** cables.





			 -16 m <sup>2</sup>	 +16 m <sup>2</sup>
<b>1</b>	 x 3	 x 3	 x 3	 x 5
<b>2</b>				


①

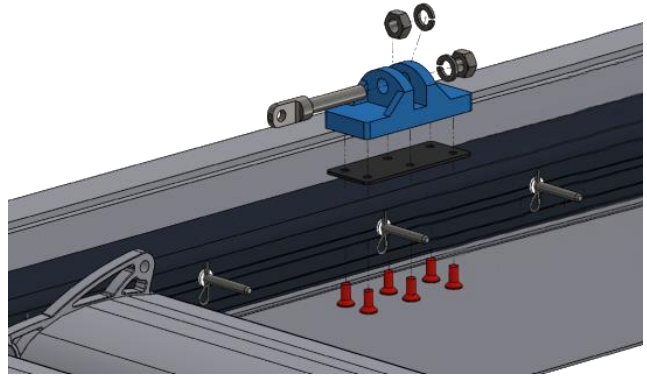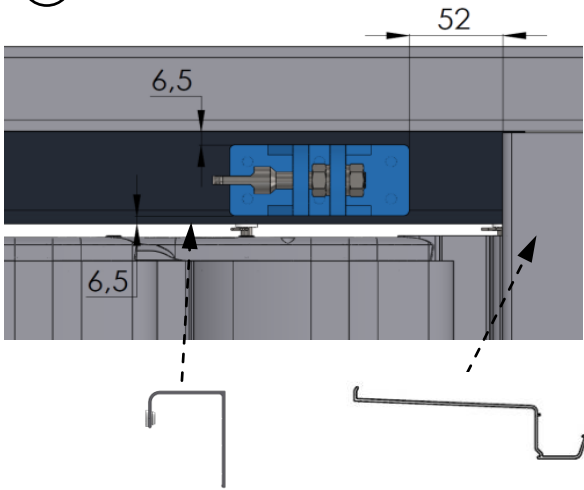




②

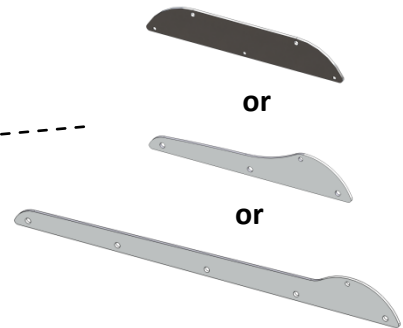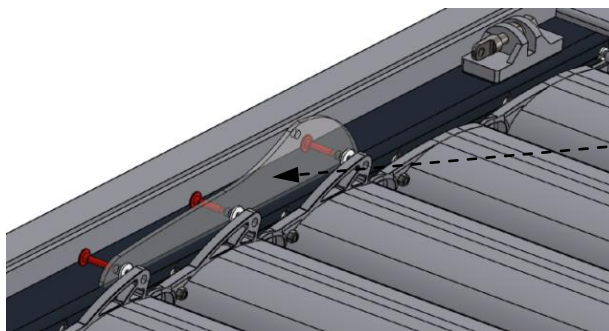  





③





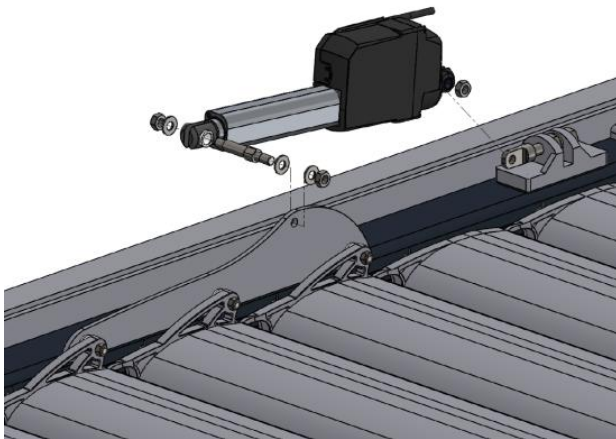 


④

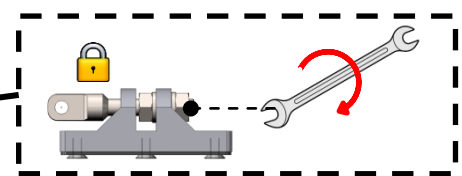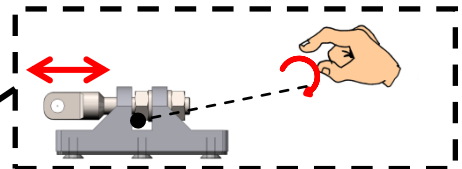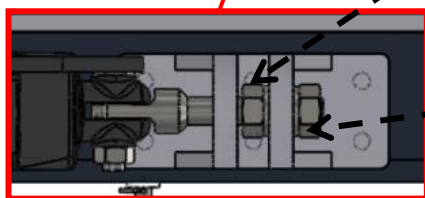   


# Installation of manual operating mechanism

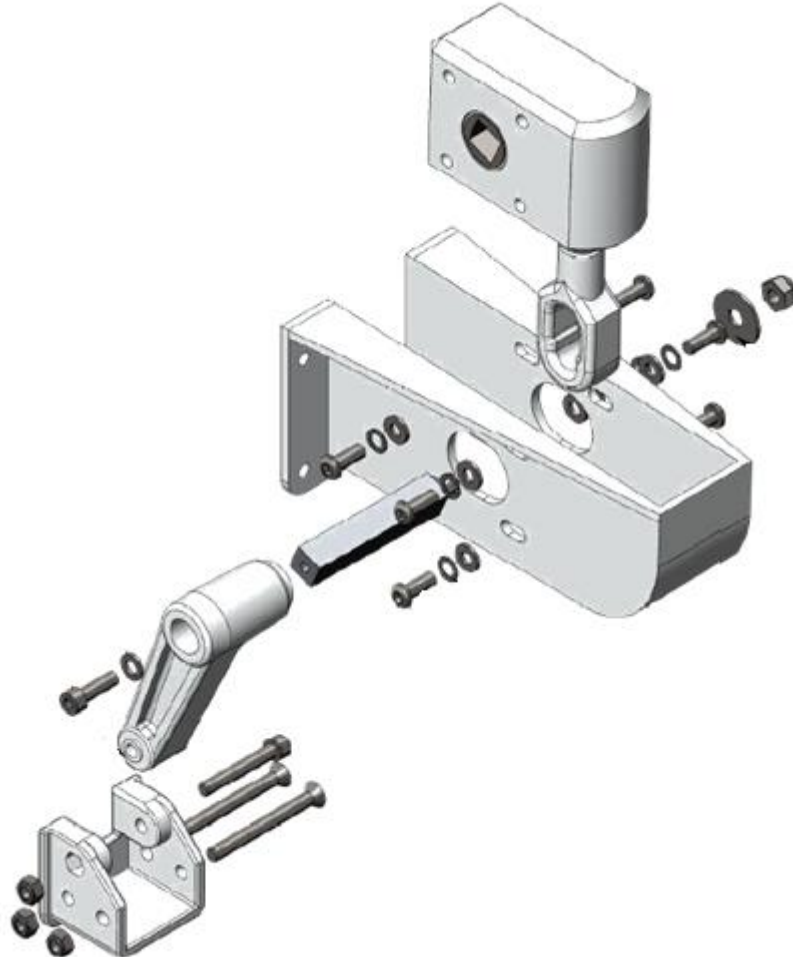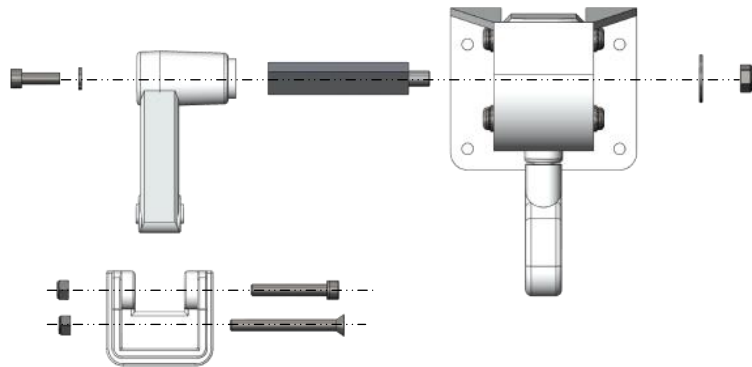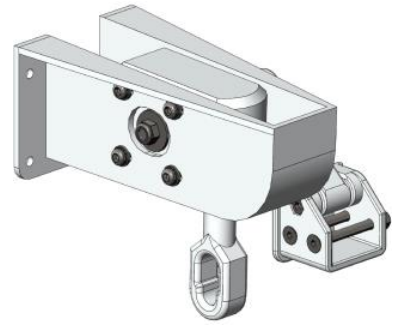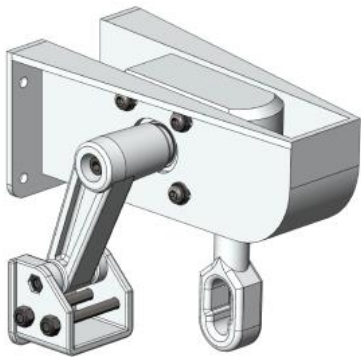    


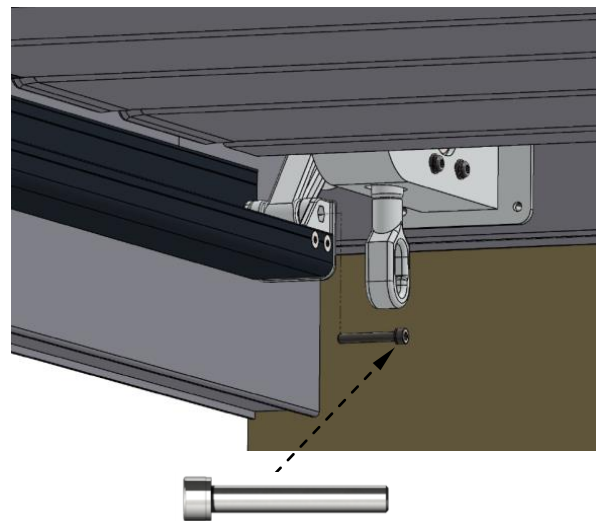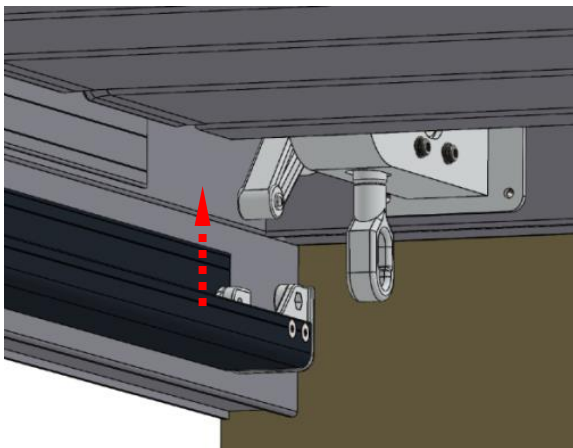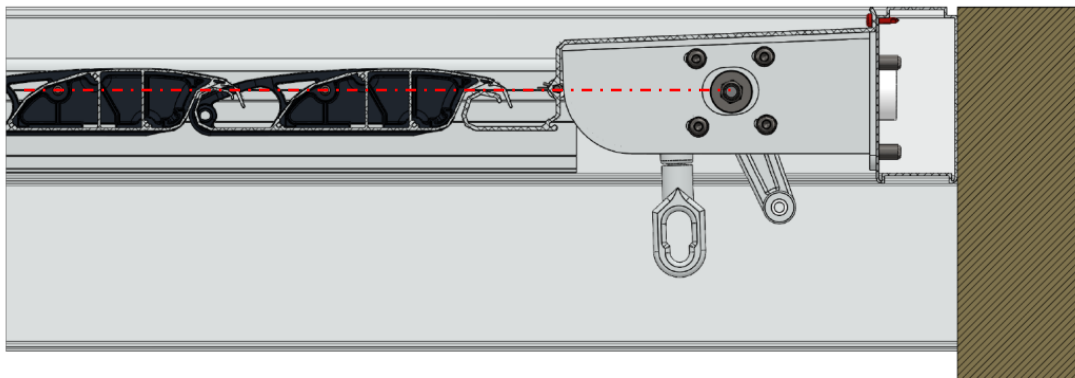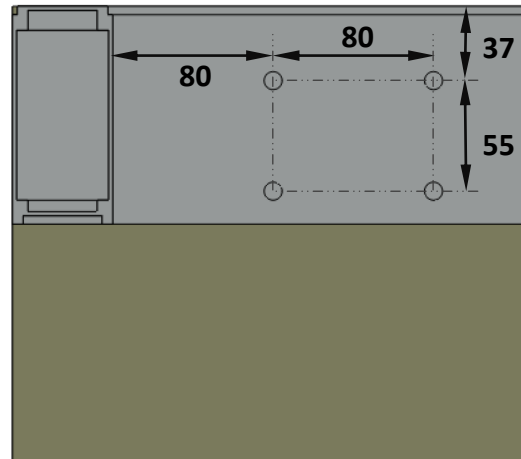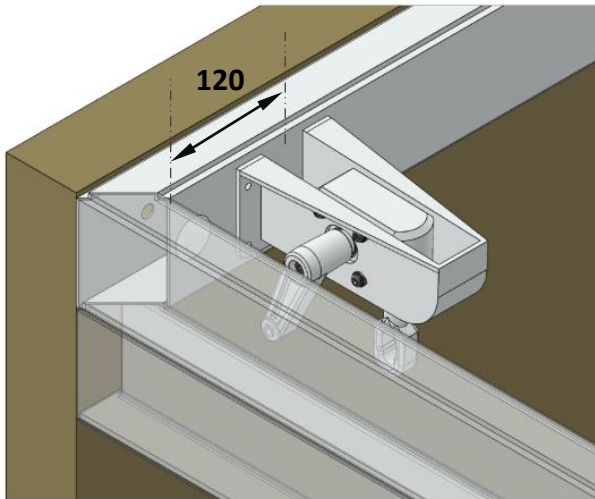     


# Installation of the opposite lateral gutter

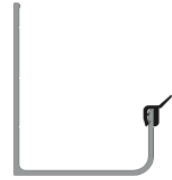 



①

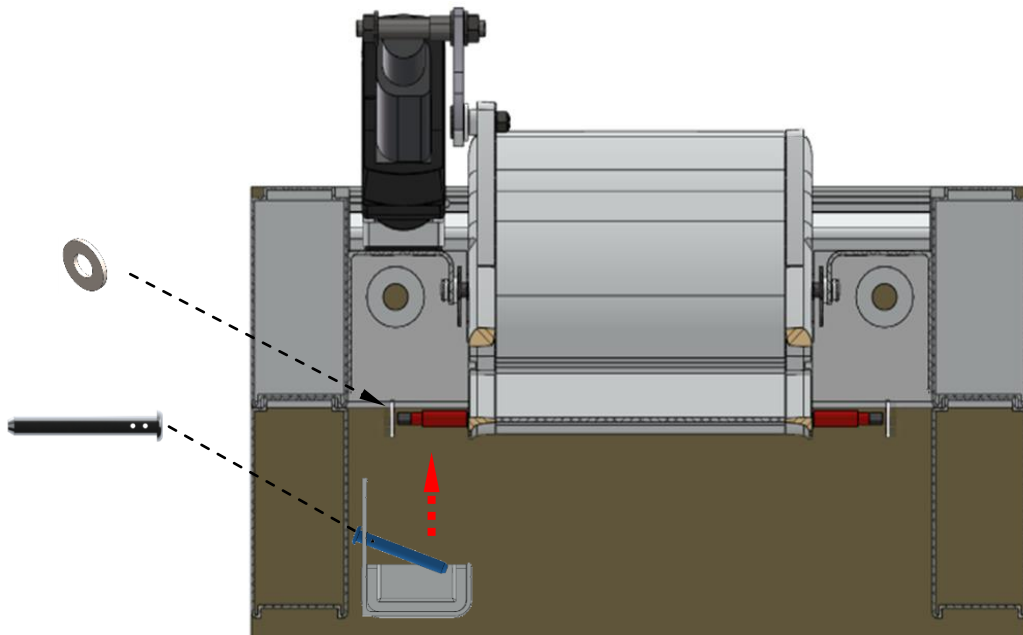 


②

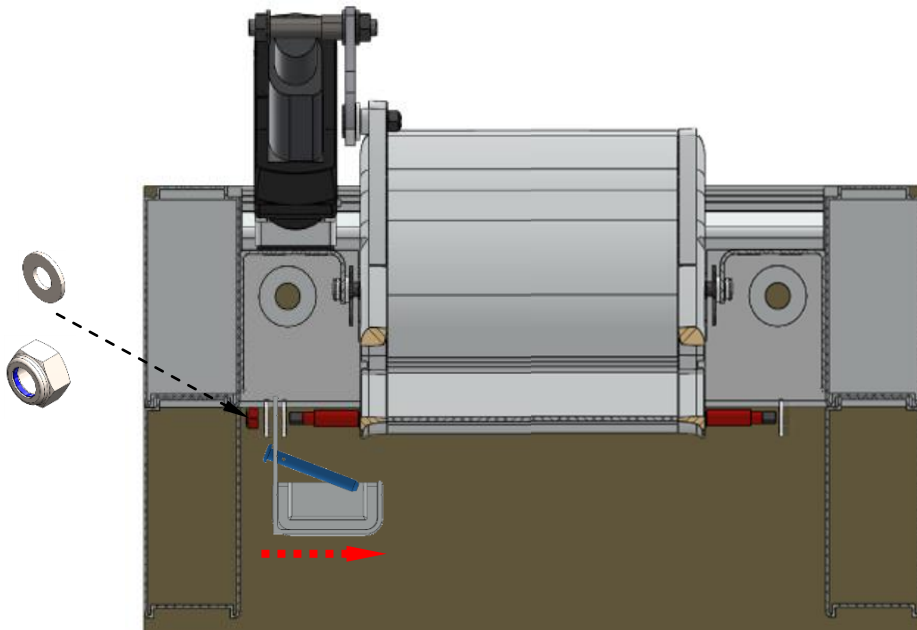 


3

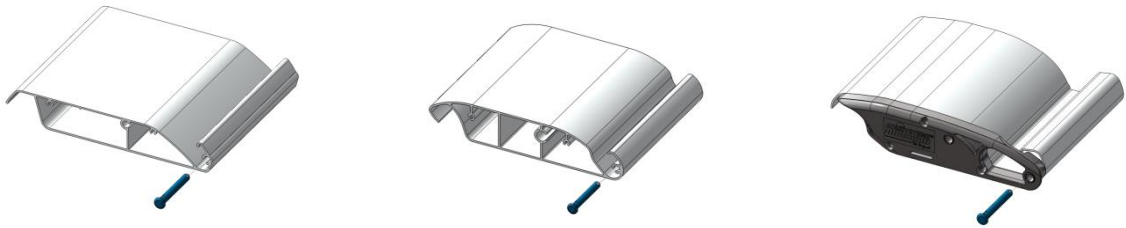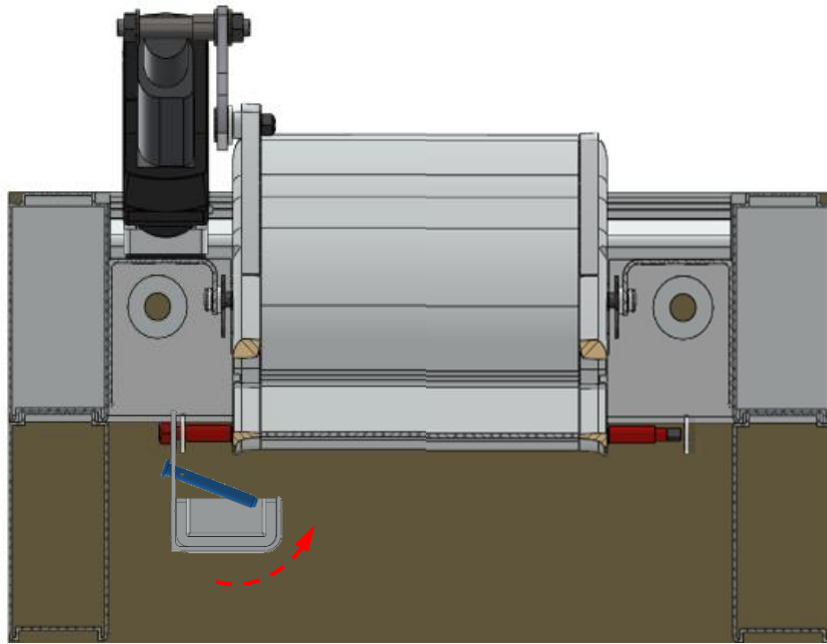  


4

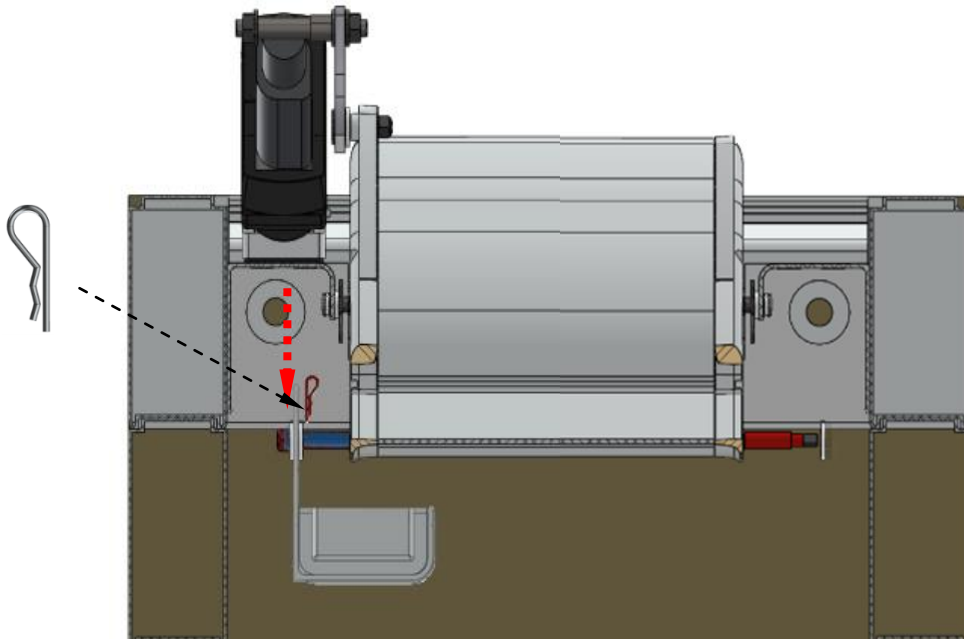 

6

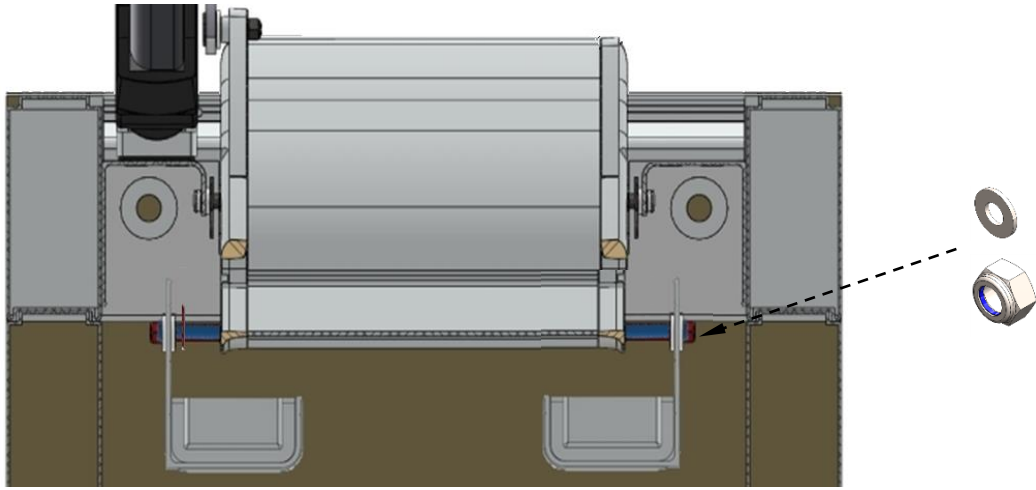 

7

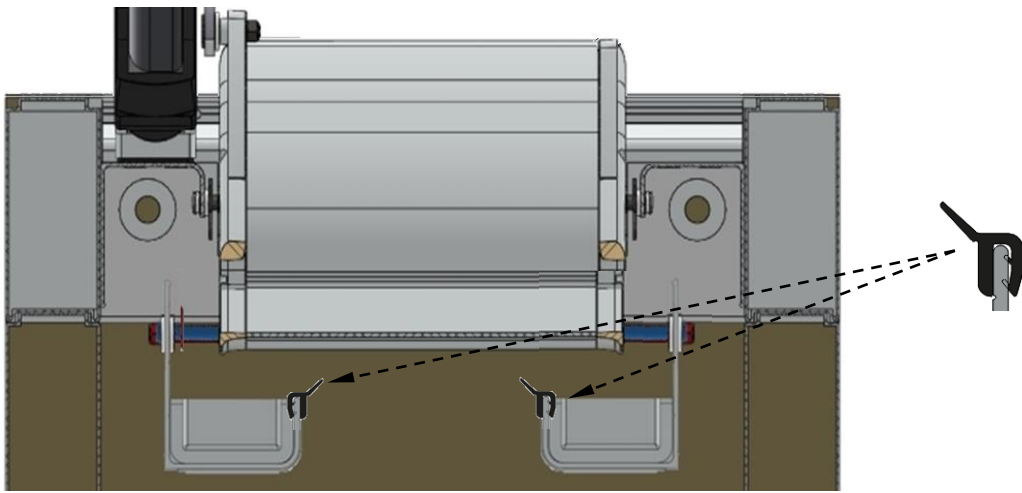 


For certain Bioclimatic modules, it is necessary to add a load bar in the blades to ensure the closure of the module.



Please observe the location and mounting direction of the load bars in the blades. □

The load bar should be placed at the edge of the last blade with the threaded axis (=> gutter)

 In the case where several load bars would be put, they will be distributed around the first bar, on the previous blade or on the next blade.

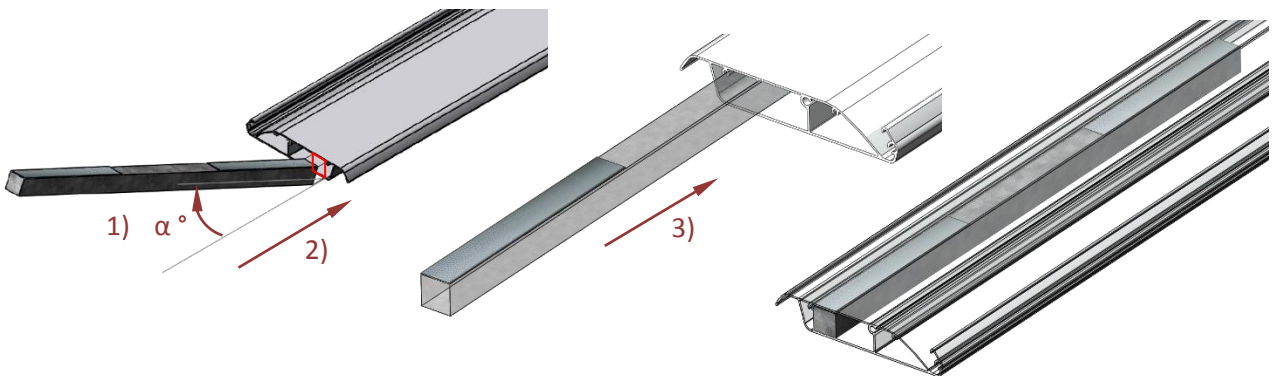

**IMPORTANT: A blade cannot contain multiple load bars.**  
**In addition the number of load bars per module cannot exceed 3.**

*Installation is complete, check if the module is working properly*



11, Route de la Cour d'Hénon

86170 – AVANTON – France

Tél. +33 (0)5 49 60 27 21

Fax. +33 (0)5 49 59 13 22

[info@solisysteme.com](mailto:info@solisysteme.com)

[www.solisysteme.com](http://www.solisysteme.com)





